

**D** Aufbauanleitung

**NL** Handleiding voor de Montage

**PL** Instrukcja montażu

**SK** Montážny návod

**RO** Instrucțiuni de asamblare

**GB** Assembly Instruction

**TR** Montaj Talimatları

**CZ** Shromazďování instrukce

**I** Istruzioni per il montaggio



**F** Instructions de montage

**RU** Инструкция по монтажу

**H** Gennyesevés utasítások


## Boxspringbett Bali

Polsterbett-Gestoffeerde bed-Tapicerowane łóżko-Tapıtara pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré  
Čalunené posteľ Čalouněné posteľ kárpitovaný ágy

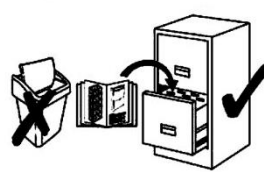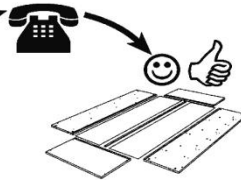


160/180/200 cm

2x

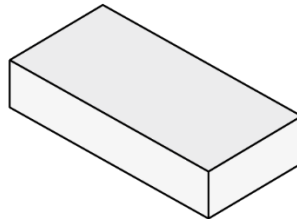


2x

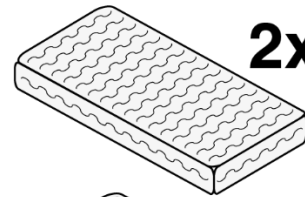


8x


1x

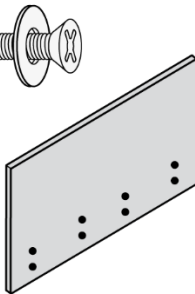


8x




1x

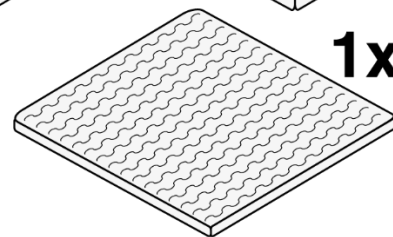


1

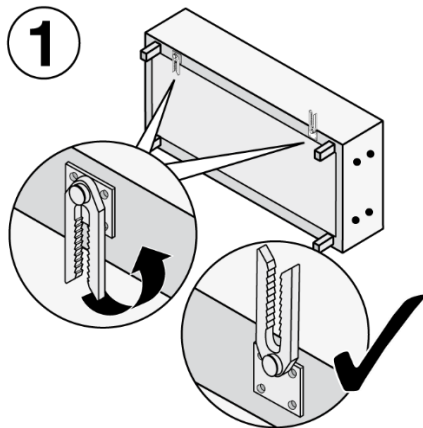


2

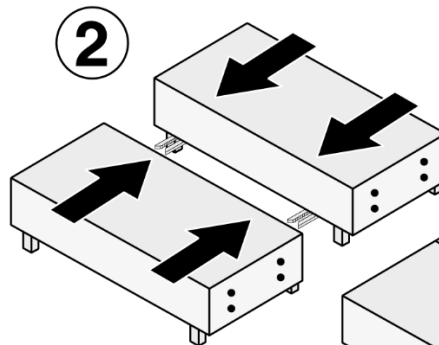

3



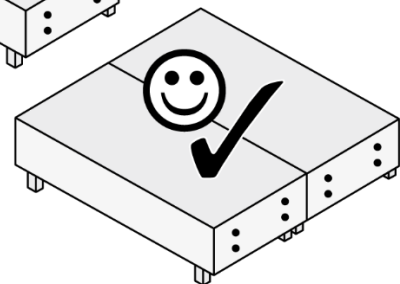


4

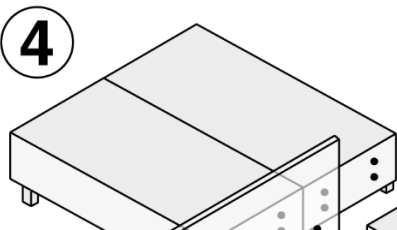


5


8x

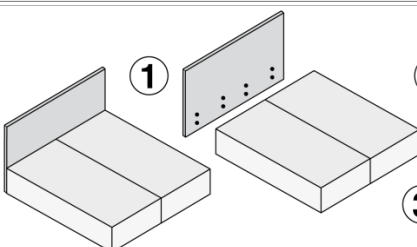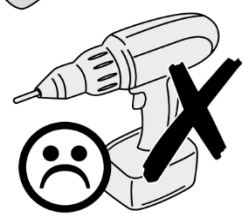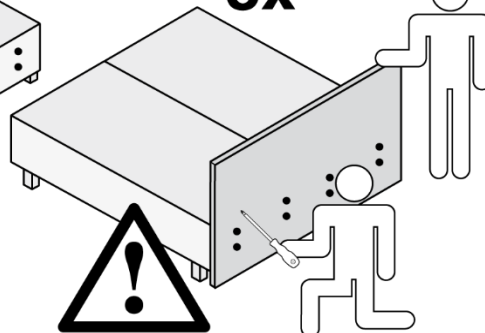

2



3



**WESTFALIA**  
Polsterbetten

Made in Germany

Elastoflex GmbH  
Löhner Straße 123  
32584 Löhne